



Virtus Fleet 4G Dashcam

1. Package Contents



| | | | |
|---|-----------------|---|---------------------|
| 1 | Dashcam | 2 | Power cable |
| 3 | Extension cable | 4 | Sim card slot cover |
| 5 | Bracket | 6 | Screw driver |
| 7 | Long screw | 8 | Short screw |


2. Device Overview




| | |
|----|--|
| 1 | TF card slot |
| 2 | Short-screw hole, for fixing bracket |
| 3 | SIM card slot |
| 4 | Short-screw hole, for fixing card cover |
| 5 | Panic button |
| 6 | LED indicator. White: Device initializing; Green: Device connecting to platform; Blue: Recording; Purple: GPS working; Red: Panic button alert. |
| 7 | Speaker vent |
| 8 | Long-screw hole, for fixing the lens |
| 9 | Bracket slots |
| 10 | Front camera |

3. Installation

1. Insert the SIM card and TF card, cover it with SIM card cover, fix it with a short-screw.
 2. Clean the area on the windshield.
 3. Peel off the red film of 3M adhesive pad and stick the bracket to the front windshield of the vehicle.
 4. Slide the socket on the back of the Dashcam into the windshield mount until it locks.
- Attention:** The Dashcam should be located in or near the middle of the front windshield, and be careful not to block the driver's view.
5. Install the short-screw that secure the bracket.
 6. Adjust the front camera to the suitable angle and secure it via the long-screw.
 7. Connect the Dashcam to power source (There are two options to connect power, one is to use OBD, the other is to use 3-wire cable).

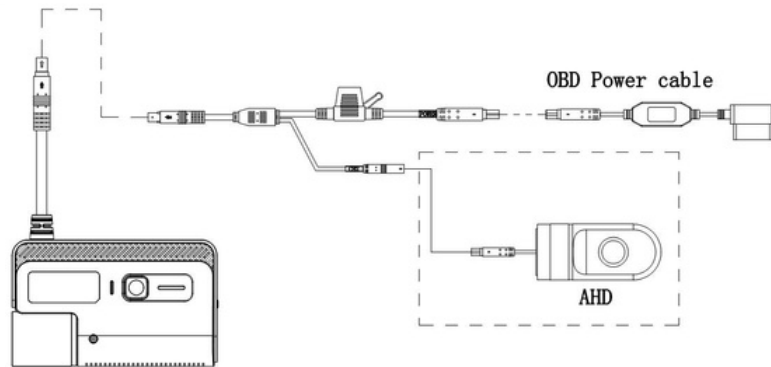

Option 1: Connect power through OBD

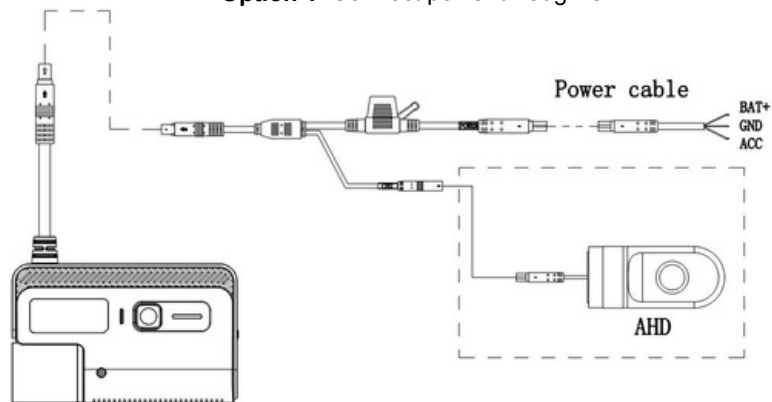

Option 2: Connect power through BAT& ACC and GND cable

4. Not Covered under Warranty

- Unauthorized repair, misuse, crash, negligence, abuse, liquid penetration, accident, tear or alteration.
- Warranty expired.
- Damage caused by force majeure.
- Artificial damage. Such as the use of non-rated voltage, used in non-specified environments, etc. resulting product performance failures.