

# **MDVR FAQ**

## **What type of vehicles is this compatible with?**

This is compatible with a multitude of vehicles, HGV, LGV, Plant etc. As long as the vehicle has a permanent power source and an ignition source it will fit. You can choose what cameras and monitors you would like, please speak to sales and they can advise you accordingly.

## **What's the difference between Live and Non-Live?**

Live you can view it remotely if the assets ignition is on, you can see where the vehicle is, what speed and pull data. You can also change any settings remotely.

Non-Live you will have to have the vehicle with you in order to recover files, you can go into the videos saved via the monitor, select which videos you need and then save them to an external USB drive. You cannot change settings remotely, this will be done in the initial setup when installing to the asset.

## **How many cameras can I have?**

We can cater for as small as a single camera all the way up to 8 cameras, these can also range in different resolutions dependant on what suits your needs.

## **What happens if the DVR loses signal?**

In the event of no signal, it will download footage to the SSD card and store it. Once the DVR sees signal it will then send that data that has been internally stored.

## **How easy is it to install?**

We would recommend using a reputable and qualified auto electrician to install these. The complexity is dependant on how many cameras you require.